

NOT WARMING UP - COMPACT



Not
warming
up


IMPORTANT:
SWITCH OFF TOPBREWER
BEFORE PROCEEDING.
Open the TopBrewer door, then
remove the dregs bin & place
in a safe area to one side.



To the top right of the brewer there is a
small finger hole with an over-temperature
reset button. Place finger into hole and
push once. Now slide the TopBrewer
out as far as possible.



The steamer over-temperature reset
button is situated to the rear bottom right
hand side corner below the pipe fittings.
Push inwards once.

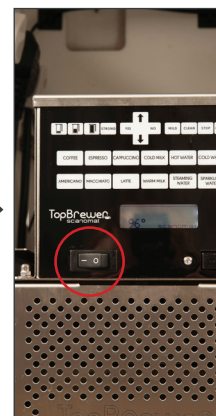

Slide the TopBrewer back into the
cupboard and switch back on.
The pistons will now initiate.

Now watch the blue display on the front
of the TopBrewer.
You will see three alternating temperatures,
one for the brewer, pre-heater & steamer.
These should start to increase and
peak at the stated temperatures below:

Brewer Temp: 88°C
Pre-heater Temp: 94°C
Steamer Temp: 141°C

Repeat this procedure again if the
first attempt fails.

Did this work?

NO

Service visit required.
Please log through:
service@scanomat.co.uk

YES

SUCCESS!