

# TopBrewer

## Two Step Cleaning Manual

TopBrewer Pro & Compact

1. Brewer Cleaning (daily)
2. Milk Cleaning (3 times weekly)
3. Choco Cleaning (2 times weekly)

scanomat



# WHAT YOU NEED FOR CLEANING

## Brewer Cleaning



Yellow Tabs, 25 pcs  
Brew Group Cleaner

SKU 4302339



Cleaning Brush

SKU 4302319



Tip Brushes

SKU 4302349



TopBrewer Waste bags  
Bio-degradable

SKU 017



In general  
Cleaning Cloth and  
Paper Towel

## Milk Cleaning



Milk Cleaner - Blue  
Alkaline

SKU 4302830



Jug 1000 ml (x2)

SKU 4302657

## Choco Cleaning



Milk Cleaner - Blue  
Alkaline

SKU 4302830



Choco Cleaning Can  
2,5 l

SKU 4302786



Jug 1000 ml

SKU 4302657

### Suggested weekly cleaning schedule

Monday	Tuesday	Wednesday	Thursday	Friday
Brewer	Brewer	Brewer	Brewer	Brewer
Milk	Choco	Milk	Choco	Milk

---

# BREWER CLEANING

PERFORM DAILY

---

*Cleaning is recommended to be done at the end of the day*



USING YELLOW TABS



PRO



COMPACT




## 1 OPEN THE STAINLESS STEEL DOOR

The machine goes into neutral mode with the bottom piston raised, ready for cleaning when the door is opened.

PRO: Open the hinged door by pushing the right side until it pops out and pull it towards you.

COMPACT: Open the door by pivoting it outwards from the bottom and sliding it into a horizontal hold position.

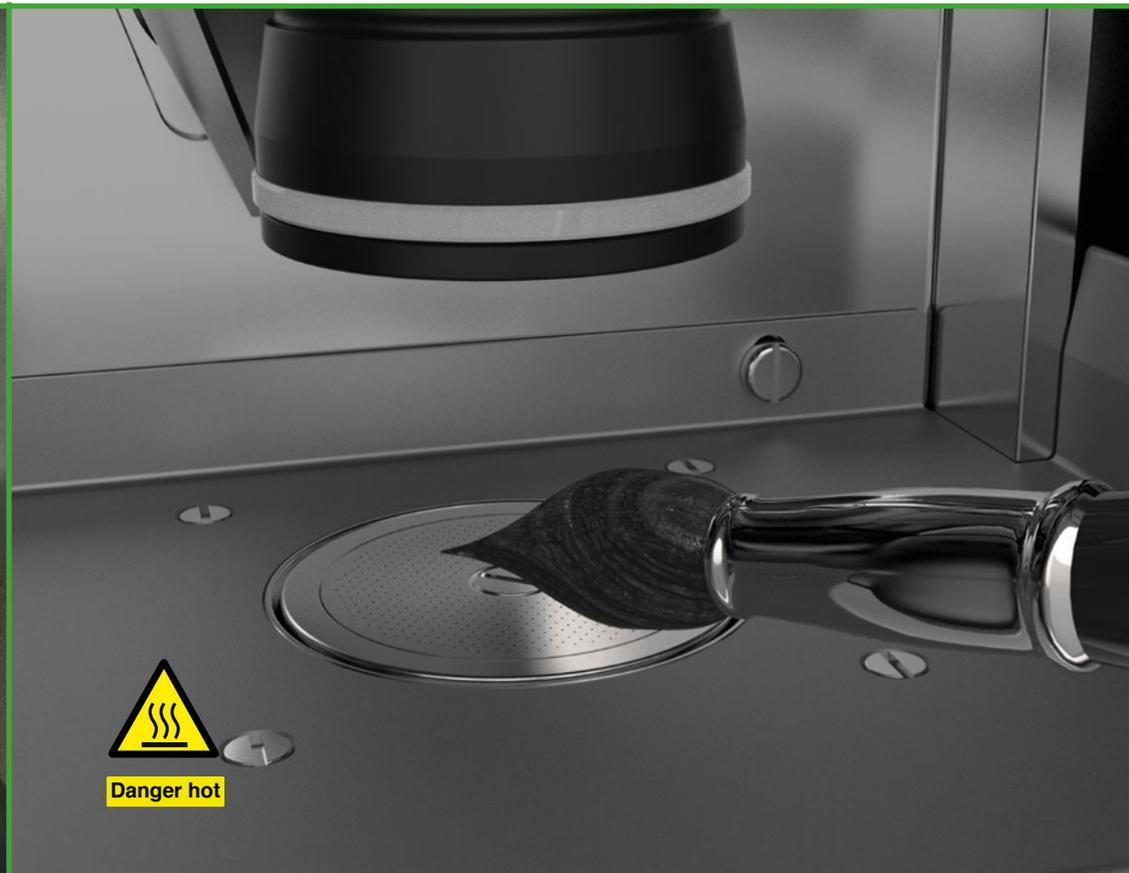

2

## MOVE SCRAPER

Start by pulling out the scraper arm (black) on the brewing unit.

The scraper can be moved freely to allow access to all components.

3

## REMOVE GROUND COFFEE

Brush around the grey base plate in order to remove any ground coffee deposits.

Brush the deposits into the dreg bin.

Pull out the dreg bin, empty it, clean the area and put the dreg bin back.



4

## CLEAN TOP AND BOTTOM PISTON

Having removed most of the coffee grounds, wipe the top piston sieve (underside) as well as around the top piston O-ring (white ring).

The stainless steel bottom piston must be completely clean with no coffee remains.

5

## ADD CLEANING TAB

Push the scraper back into the position as shown.

Place a brewer cleaning tablet inside the scraper.

Close the door on the machine.




## 6

### START CLEANING PROCESS

Push the faucet all the way down the the diptray.

Select "CLEAN" from the left pane menu on the iPad. The process will take approximately 2,5 minute and "Machine is ready" will appear in the status bar in the App once completed.

*If the cleaning process is accidentally stopped please start it again from the menu.*

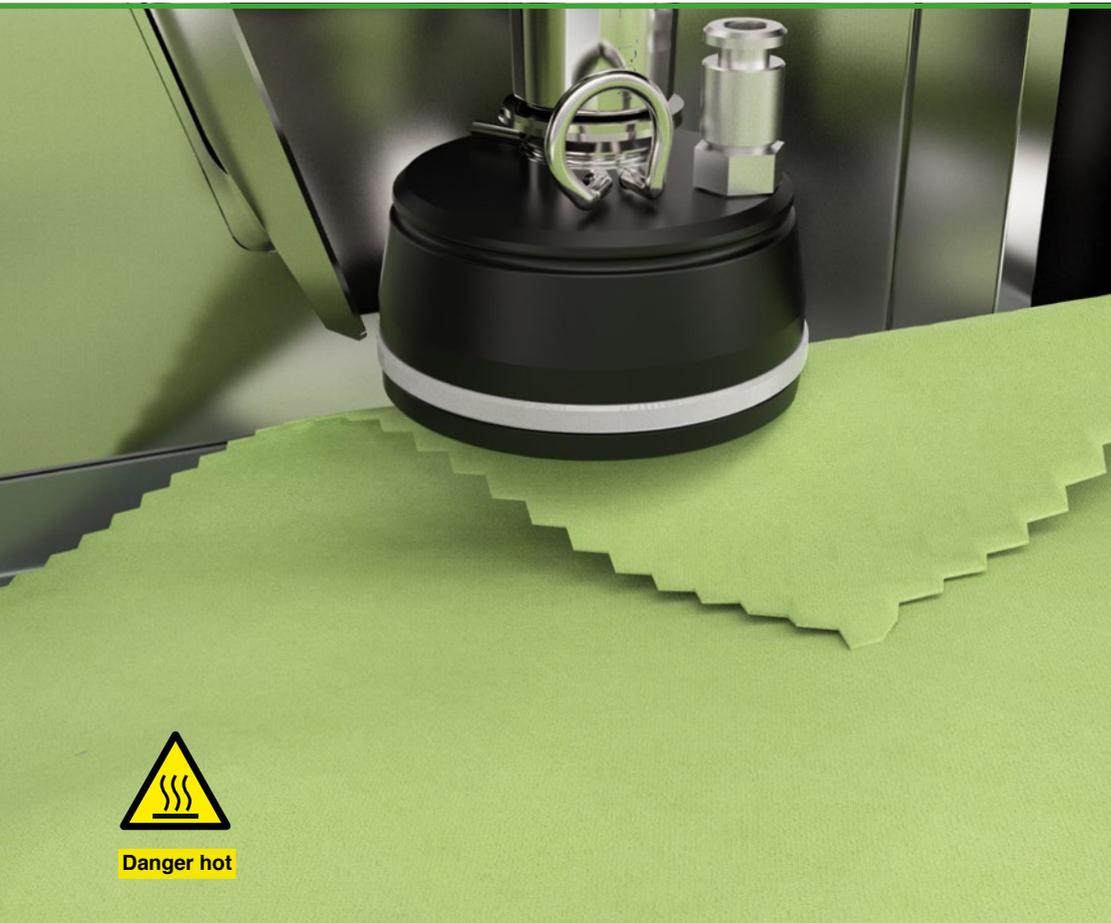

## 7

### WIPE

When the cleaning process is done, open the door to the machine, pull out the scrubber arm, and wipe the area and pistons.

Close the door.

## 8

### PRIME

Prior to use, prime the TopBrewer by dispensing one espresso or coffee drink.

Discard the drink.

Now the brewer is clean and TopBrewer ready for use.

---

# MILK CLEANING

PERFORM 3 TIMES A WEEK


---

*Before the milk clean, please ensure that you  
have done the brewer cleaning.  
This is the optimal way to maintain your TopBrewer.*

USING LIQUID CLEANER



## PREPARE MILK CLEAN

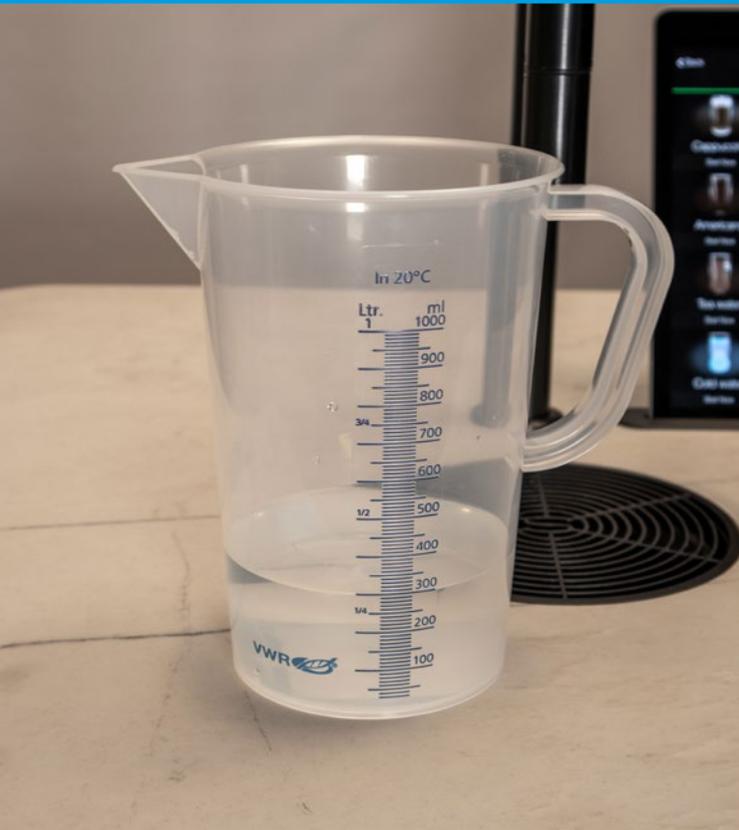

### CLEAN WATER

Fill a jug with clean **cold** tap water, approx. 300 ml.



### MIX CLEANING LIQUID

Fill another jug with 600 ml of **warm** water.

Add 30 ml of cleaning liquid to the water.

! *If the fridge has dual milk lines, mix double of the cleaning liquid.*



### PUSH FAUCET DOWN


Push the faucet all the way down to the drip tray to avoid liquid splash during the cleaning process.



If there is no customise option for the milk drink in the menu, press on the middle jug button on the machine keyboard three times (display \*10) and then the Warm Milk button.

This will run 10 times of a normal cup size.

Press STOP to cancel.

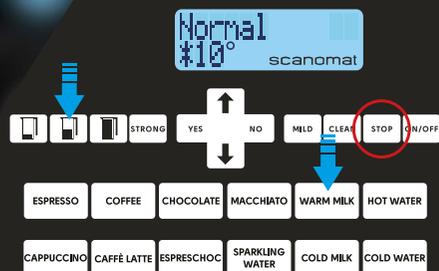

## 1

### RINSE WITH CLEANING LIQUID

Place the jug with the mixed cleaning liquid in the fridge. Insert the milk line(s) into the water.

Select "Cold Milk" or "Warm Milk" in the menu on the iPad. Slide the size and number of cups to maximum and select "Start now". Repeat until the jug is empty.

*If there is dual milk lines, do this step for both milk choices.*



## 2

### RINSE WITH WATER

Replace the jug in the fridge with the water jug. Insert the milk line(s) into the water.

Select "Cold Milk" or "Warm Milk" in the menu on the iPad. Run **1 cup** through to rinse the line(s).

*If there is dual milk lines, do this step for both milk choices.*


# CLEAN MILK HOUSING AFTER CLEANING PROGRAM

4

## REMOVE CASING AND HOUSING

Gently remove the outer metal casing (A) of the faucet by twisting the metal head clockwise.

Slide down the black housing (B) and clean the outlet with a damp cloth or warm water.

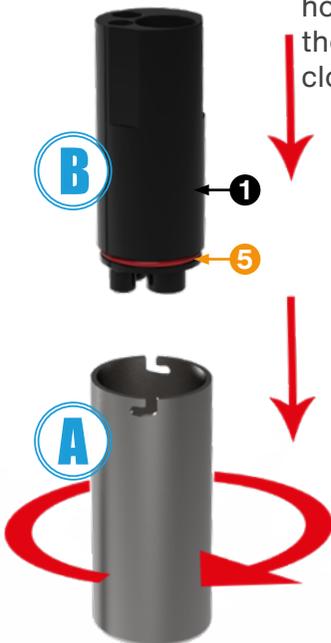

### SKUs for reorder

#### O-rings

- 1 4200446
- 2 4200445
- 3 4302169
- 4 990480005000
- 5 4200444

#### House/Milk Foamer

- 1 2007109 / 2009623
- 2 2008259
- 3 2007424



5


## REMOVE MILK FOAMER

Unscrew the milk foamer (A). Separate the two parts of the foamer unscrewing it clockwise (B).

Clean the milk foamer in hot water with the tip brushes.

Clean the two holes (bottom/ side) in nozzle (C) with the tip brushes.


Connect the two parts of the milk foamer again and re-attach it to the nozzle.

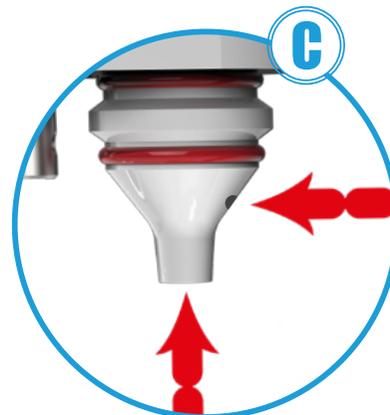

6

## RE-ATTACH HOUSING/CASING

Re-attach the milk foamer housing (A). Then re-attach the outer metal casing by twisting the metal head anti-clockwise (B).

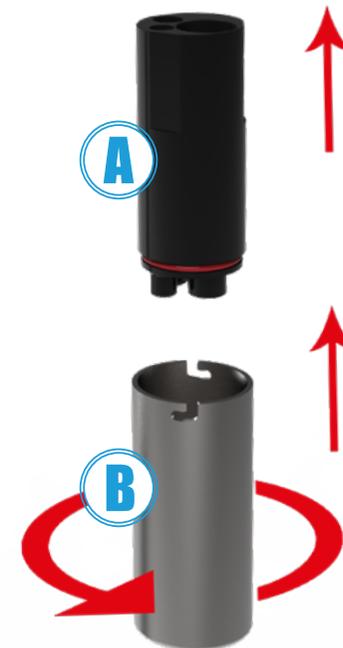



7

## WIPE FRIDGE AND ADD MILK

Remove the jug and wipe the fridge inside with a damp cloth.

Place the milk can or container, add the milk lines and close the fridge.



8

## PRIME WITH MILK DRINK

Prior to use, prime the TopBrewer milk system by dispensing a cup of milk. Discard the drink.


*If there is dual milk lines, do this step for both milk choices.*

Now the milk system is clean and ready for use.


# CHOCO

## CLEANING

PERFORM TWICE A WEEK

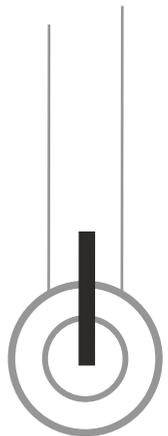

**VALVE  
CLOSED**

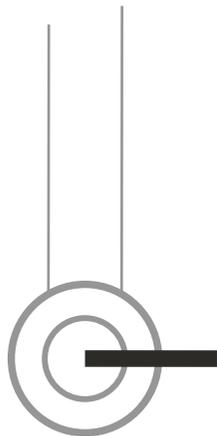

**VALVE  
OPEN**

USING CHOCO CLEANING SYSTEM



## 1 PREPARE CHOCO CLEANING

Mix 400 ml of warm water with 20 ml of cleaning liquid in a jug and add it to the choco cleaning can (make sure the lever is closed on the tube).

On the choco rack close the valve from the choco box and disconnect the tube from the rack. Wipe away any left over chocolate from the connector.




## 2 CONNECT CLEANING CAN

Place the cleaning can on the table, with the black stud facing down (avoid spilling the liquid) and connect the tube to the choco rack.

Turn the lever on the valve to open.

Push the faucet all the way down to the drip tray.

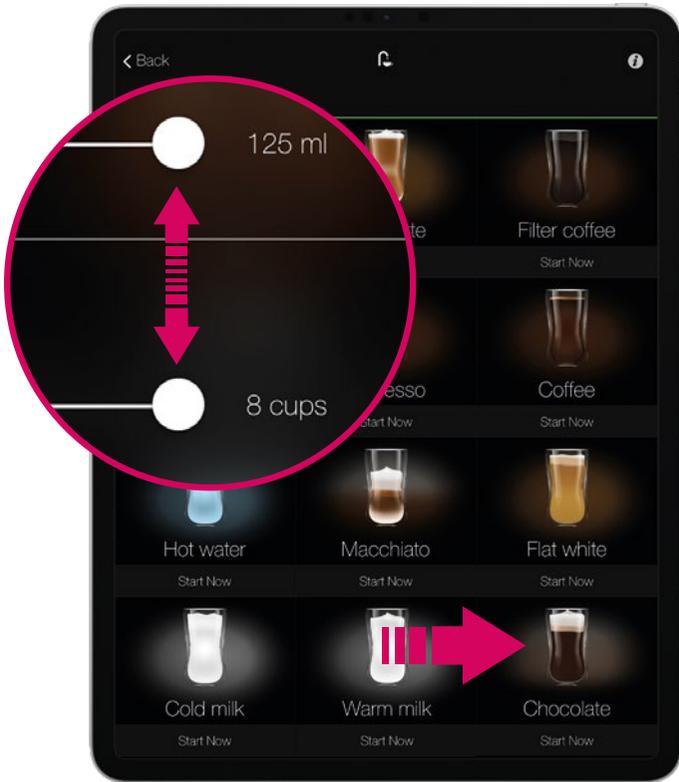

### 3 START CLEANING

Select the hot chocolate drink from the menu on the iPad. Maximise the size and cup numbers, select “Start now”. Repeat until the can is empty.

If there is no customise option start single chocolate drinks repeatedly.

### 4 RINSE WITH WATER



Add 300 ml clean cold water to the cleaning can. Select the hot chocolate drink, maximise the size and cup numbers, select “Start now”.

Repeat until the can is empty.

### 5 RECONNECT & PRIME

Disconnect the cleaning can tube. Wipe off the connector on the rack.

Reconnect the choco box tube. Open the valve and run chocolate drink(s) from the iPad menu until the chocolate is back in the system.

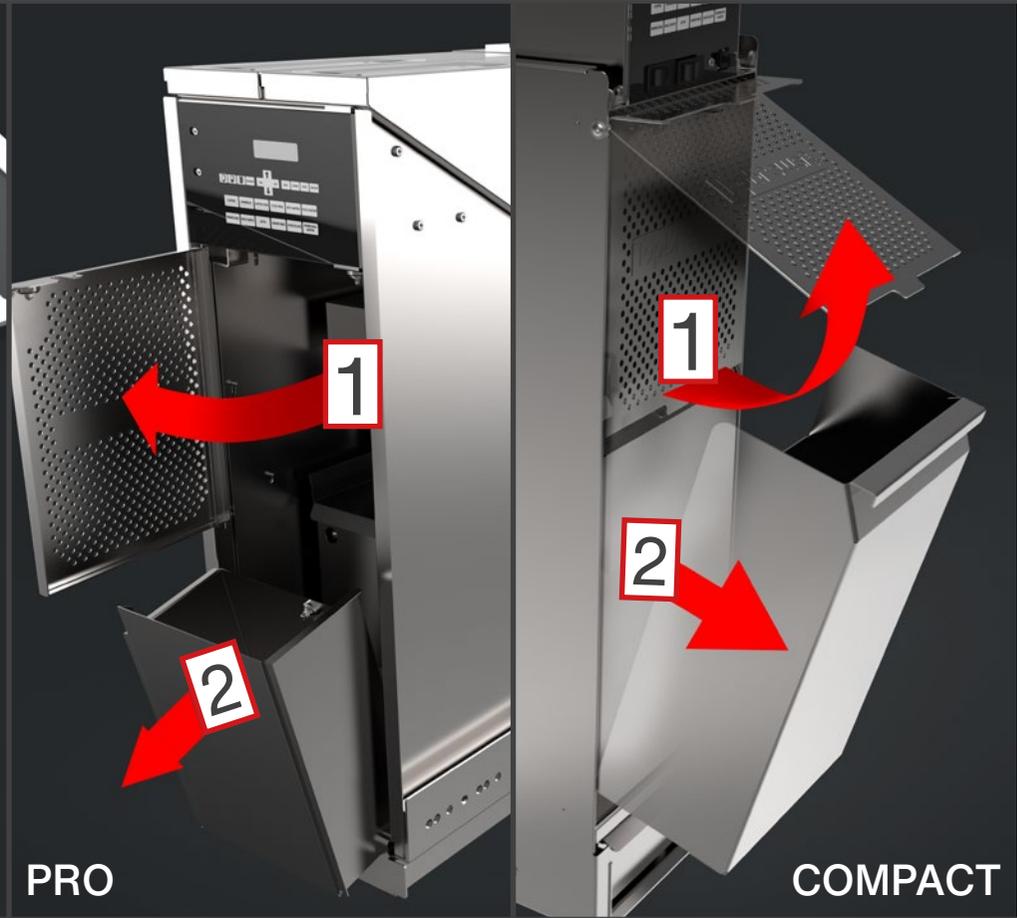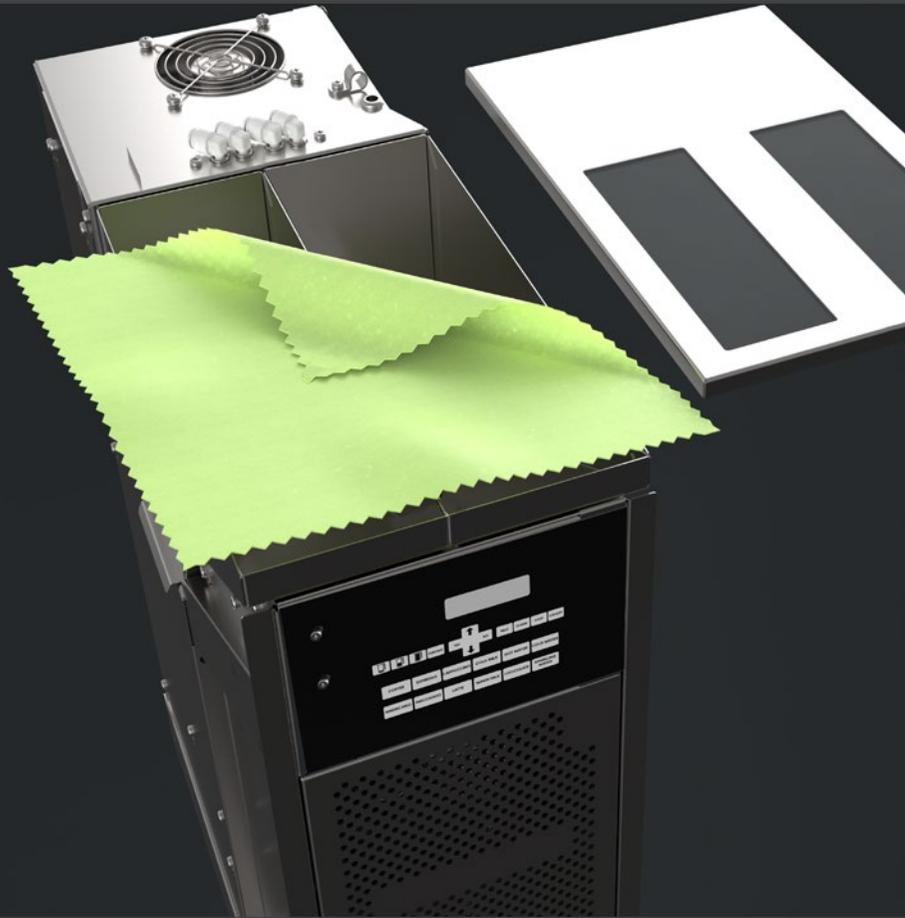

## IMPROVING TASTE EXPERIENCE

Remove lid from bean hopper and wipe with a damp cloth prior to filling it with beans.

Fresh Amokka® Coffee beans have a great flavour, therefore do not overfill the hoppers to allow beans to always stay their best - store unused beans in a sealed bag somewhere cold.



## REMOVING COFFEE WASTE

In the status bar of the app, the machine will notify you when the coffee dreg bin is full. When removing the bin (keep switched on) the unit will reset its counting system and will assume that you have emptied it. Therefore empty the dregs bin every time it is removed and follow above illustration for either Pro or Compact.