


# NOT WARMING UP - PRO




Not  
warming  
up

**IMPORTANT:**  
**SWITCH OFF TOPBREWER**  
**BEFORE PROCEEDING.**  
Open the TopBrewer door, then  
remove the dregs bin & place  
in a safe area to one side.

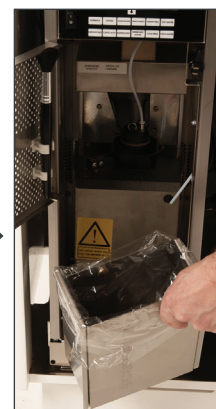

To the top right of the brewer there is a  
small finger hole with an over-temperature  
reset button. Place finger into hole and  
push once. Now slide the TopBrewer  
out as far as possible.

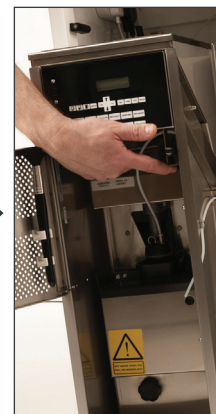

The steamer & Preheater  
over-temperature reset buttons are  
situated at the lower back of the machine.  
Place your hand round the side & locate  
the over-temperature resets with your  
fingers & push inwards once.



Slide the TopBrewer back into the  
cupboard and switch back on  
(The on/off switch in some cases can be  
located on the right hand side).  
The pistons will now initiate.

Now watch the blue display on the front  
of the TopBrewer.  
You will see three alternating temperatures,  
one for the brewer, pre-heater & steamer.  
These should start to increase and  
peak at the stated temperatures below:

**Brewer Temp: 88°C**  
**Pre-heater Temp: 94°C**  
**Steamer Temp: 141°C**

Repeat this procedure again if the  
first attempt fails.

**Did this work?**

NO

Service visit required.  
Please log through:  
[service@scanomat.co.uk](mailto:service@scanomat.co.uk)

YES

**SUCCESS!**